

**Insatallation Instructions** Dismounting the FM-A Knob

1. Remove the Cap of the Knob with a flat screw driver



2. Take the assembly tool and screw of the knob. Important: Don't adjust the shaft to a different adress! Ensure the shaft is in Position 00! To check if the shaft is on 00, the flat side have to show down, or check it with a Controller





**Insatallation Instructions** Mounting the FM-A Knob

3. Take a businees card as spacer to have the perfect distance between case and knob.



4. Put the knob exactly with the white line to the 0 Position





**Insatallation Instructions** Mounting the FM-A Knob

5. Take the assembly tool and screw the knob on the shaft.
Important: Don't adjust the shaft to a different adress!
Ensure the shaft is in Position 00!
To check if the shaft is on 00, the flat side have to show down, or check it with a Controller



6. Remove the business card





**Insatallation Instructions** Mounting the FM-A Knob

7. Put the cap exactly to the 0 with the white line.



8. Use a Controller to double-check that the Shaft is in the correct position.